
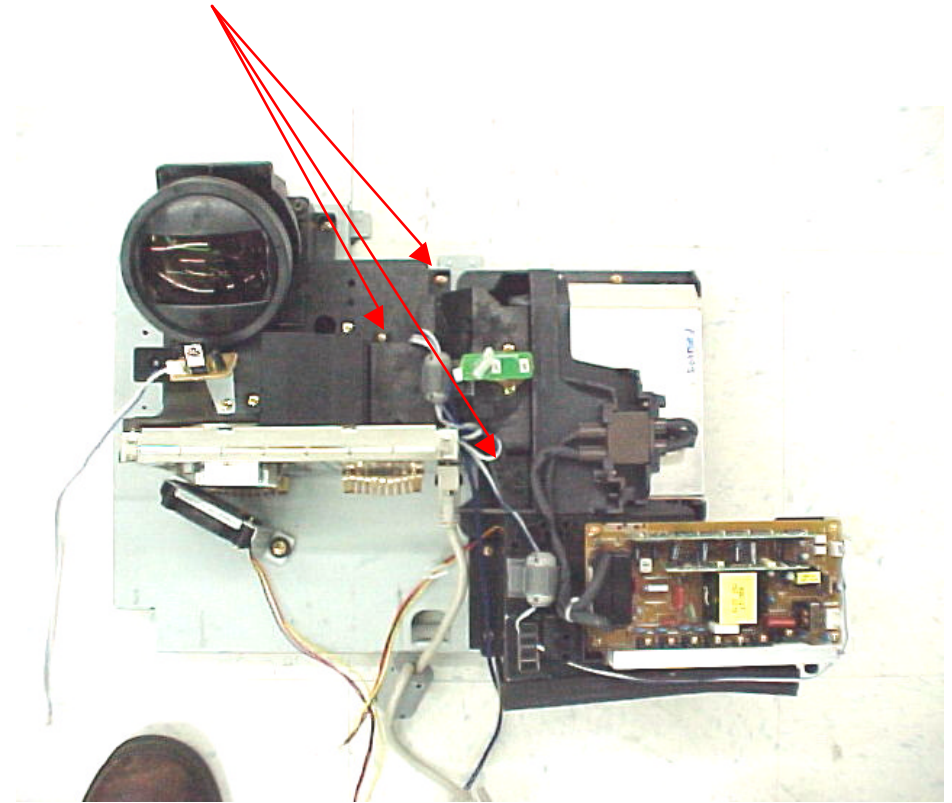


## Color Wheel

1. Remove light engine assy” (see pg. 30)
2. Remove (3) screw holding color wheel cover.
3. Remove cover.
4. Remove (2) connectors from DMD PCB to color wheel.
5. Remove (3) screws holding color wheel ass’y.
6. Remove color wheel ass’y’.

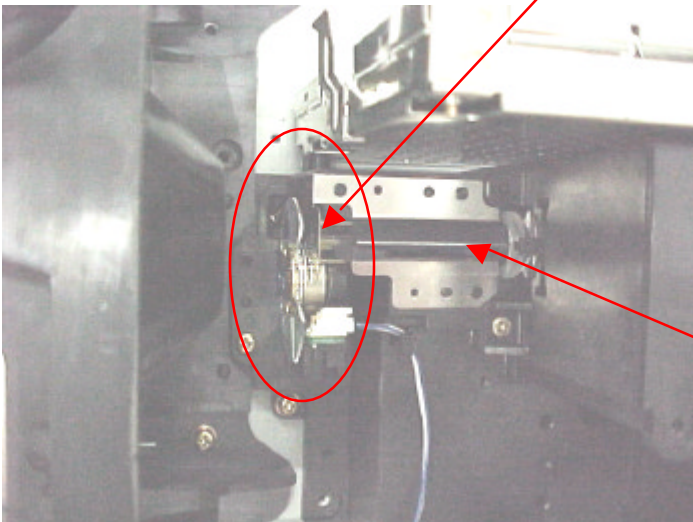

7. Before re-assembly, blow out any dust from the light tunnel area with compressed air, and apply electrical tape over ends of cover.

## Light Engine

1. Remove digital PCB (see pg.29)
2. Remove (1) screw as shown
3. Pull light engine assy' out two inches, and remove all connectors to DMD PCB, and ballast.
4. Slide light engine assy' out completely.

